



ENERSOL HEADER REPLACEMENT

- 1. DISCONNECT HEADERS**
by removing black clip.

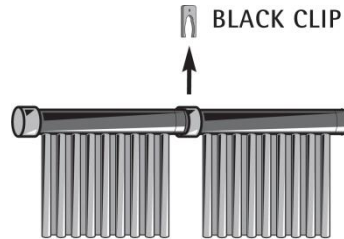


- 2. INSERT ORANGE INSTALLATION TOOL.**
Pull Headers apart.

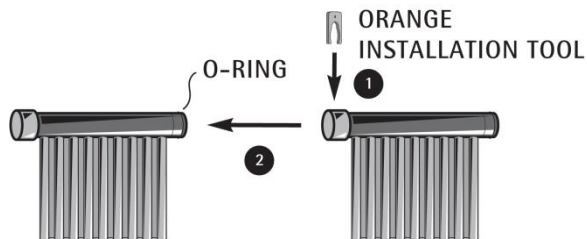


- 3. REMOVE RUBBER**
by gently prying rubber off using a flat screwdriver. Start at one end and work across the header.



- 4. RE-ATTACH RUBBER**
by dipping ends of rubber into warm soapy water and pushing on to header. *(When connecting different versions of headers, you may need to cut off Locator Tab).*

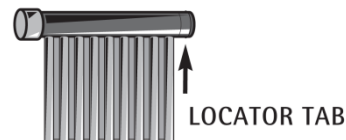

- 5. RECONNECT HEADERS**
first by lubricating the O-ring with "O-ring Lubricant" (white lithium grease), then use Orange Installation Tool to slide together and secure with the Black Clip.

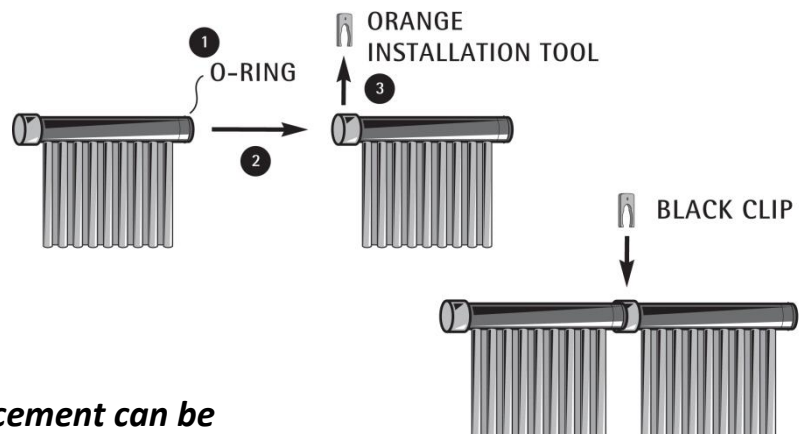

All parts required to perform a header replacement can be purchased from your local dealer or at www.solarthermal.com.