

- Product modification
- ✓ Installation modification
- Commissioning modification

Connecting Temperature Sensors to the Pentair SolarTouch®

969 Juliana Drive
Woodstock, ON N4V 1C1
tel: 877.268.6502
fax: 519.268.6292



Pentair SolarTouch® Temperature Sensor installation notification.

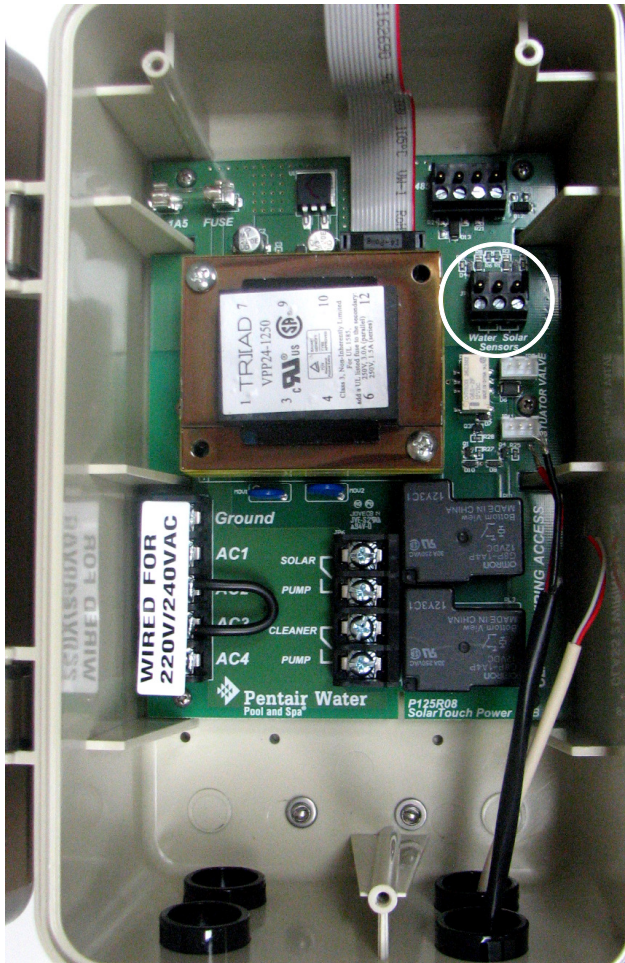


Figure 1

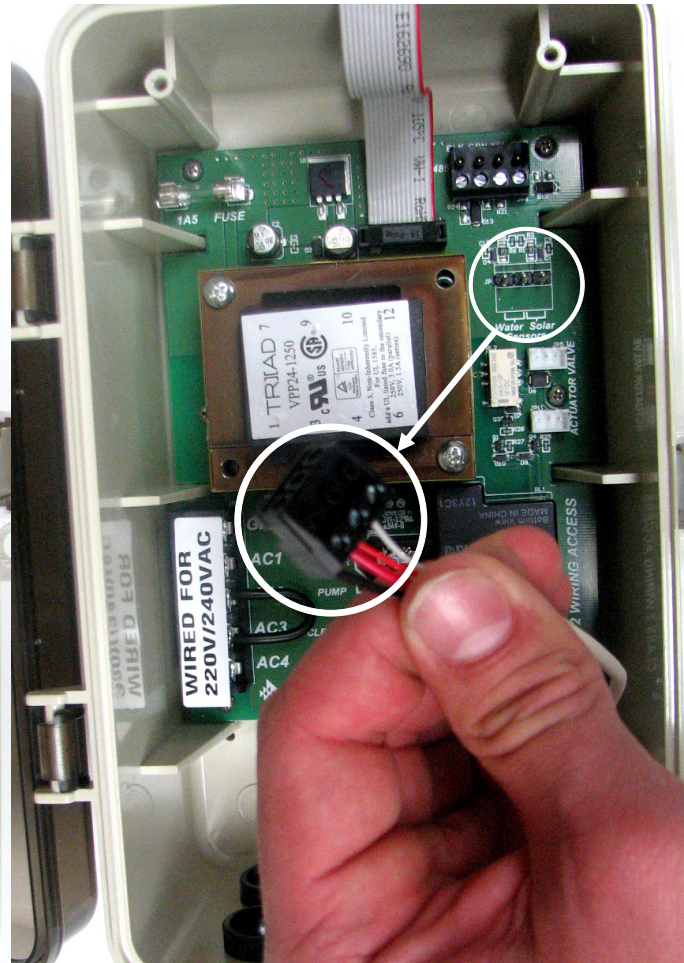


Figure 2

When connecting the temperature sensors to the Pentair SolarTouch® Solar Control System, the connector should be removed (See Figure 2) from the panel prior to connecting the sensors. After connecting the sensors, place the connector back in its place on the panel.